

# G-2 GAS BOILER

by

**AMERICAN-Standard**

INSTALLATION-OPERATION

AND

MAINTENANCE MANUAL


SUPPLEMENT FOR STEAM  
NON-PACKAGED BOILERS WITH  
FLUSH OR DELUXE JACKETS

APPROVED BY AMERICAN GAS ASSOCIATION

NOTICE TO INSTALLER AND OPERATOR  
THIS BOOKLET MUST BE AFFIXED ON  
OR ADJACENT TO THE HEATING EQUIPMENT

**AMERICAN-Standard**


**First in heating . . . first in plumbing**

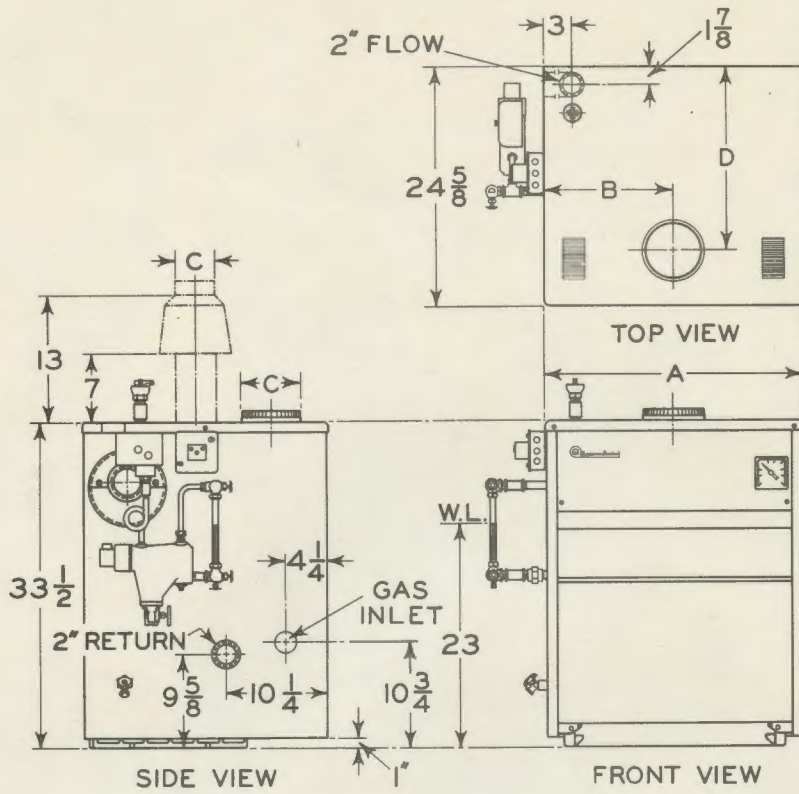

BOILER NUMBER	No. OF SECTIONS	No. OF BURNERS	A	B	C	D
G-23D	3	2	13 1/8	6 9/16	4	11 5/8
G-24D	4	3	16 3/8	8 3/16	5	19 1/2
G-25D	5	4	19 5/8	9 13/16	5	19 1/2
G-26D	6	5	22 7/8	11 7/16	6	19
G-27D	7	6	26 1/8	13 1/16	6	19
G-28D	8	7	29 3/8	14 11/16	7	19 3/8
G-29D	9	8	32 3/8	16 5/16	7	19 3/8
G-210D	10	9	35 7/8	17 15/16	8	19 1/8
G-211D	11	10	39 1/8	19 9/16	8	19 1/8

NOTE:-EXTERNAL DRAFTHOOD IS ONLY PROVIDED FOR G-23-D BOILER


Fig. 1 - Boiler with Deluxe Jacket

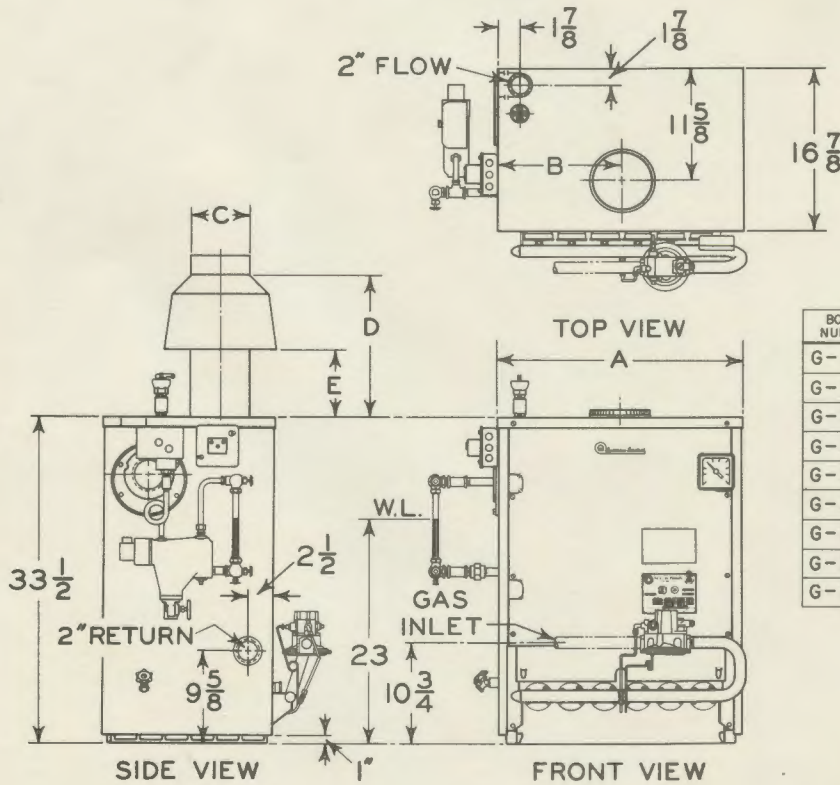

BOILER NUMBER	No. OF SECTIONS	No. OF BURNERS	A	B	C	D	E
G-23F	3	2	11	5 1/2	4	13	7
G-24F	4	3	14 1/4	7 1/8	5	13 3/4	7
G-25F	5	4	17 1/2	8 3/4	5	13 3/4	7
G-26F	6	5	20 3/4	10 3/8	6	16 1/2	9
G-27F	7	6	24	12	6	16 1/2	9
G-28F	8	7	27 1/4	13 5/8	7	20 3/4	12
G-29F	9	8	30 1/2	15 1/4	7	20 3/4	12
G-210F	10	9	33 3/4	16 1/8	8	25 3/4	16
G-211F	11	10	37	18 1/2	8	25 3/4	16

Fig. 2 - Boiler with Flush Jacket



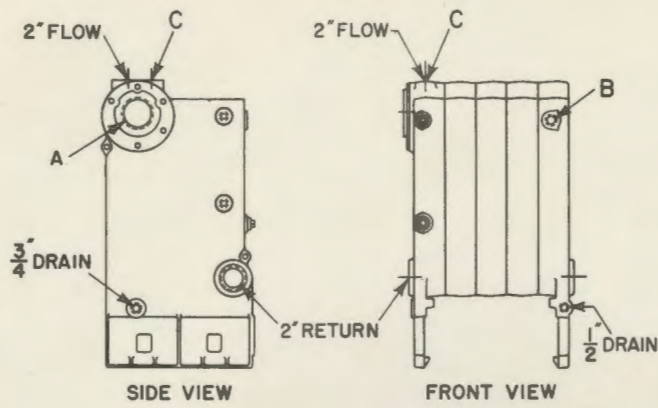

CONTROL APPLICATION		
LOCATION ON BOILER	SIZE OF TAPPING	CONTROLS
A	3"	BLOW-OFF
B	1/2"	PRESSURE GAGE
C	3/4"	SAFETY VALVE

SECTION ASSEMBLY SHOWING TAPPINGS FOR STEAM BOILER

Fig. 3 - Location of Tappings for Boiler Controls

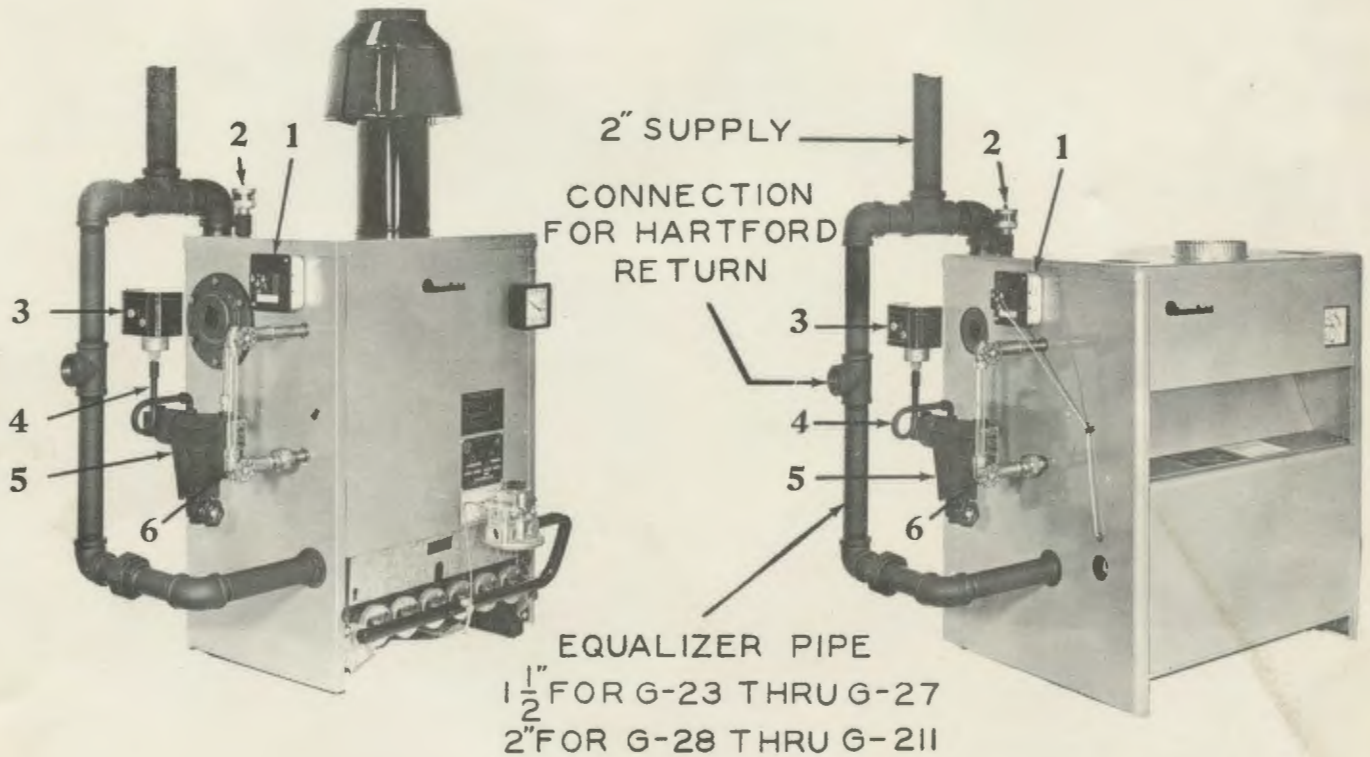


Fig. 4 - Boiler with Flush Type Jacket

- 1. Junction Box
- 2. Safety Valve
- 3. Steam Limit Control

Fig. 5 - Boiler with Deluxe Type Jacket

- 4. Siphon Fitting
- 5. Low Water Cutoff
- 6. Water Gauge

REFER TO WATER BOILER INSTALLATION MANUAL (Form BP-5-G2) PACKED IN PLATEWORK AND CONTROL BOX FOR DETAILS NOT INCLUDED IN THIS SUPPLEMENT.

INSTALLATION OF JACKET - Proceed as directed in the Installation Manual for water boilers, with the following exceptions:

FLUSH TYPE JACKET - Select L.H. Side Panel (has 7-5/8" diameter knockout) and remove this knockout for all steam boilers also two knockouts for water gauge connections.

Assemble steam gauge to right end section with 3/4" x 1/2" pipe bushing before assembling jacket.

DELUXE TYPE JACKET - Select L.H. Side Panel (has 4" diameter knockout within a 7-5/8" diameter knockout) and remove the 4" knockout for all steam boilers. Remove two knockouts for water gauge connections. Assemble steam gauge to right end section with 3/4" pipe nipple and coupling before assembling the jacket.

INSTALLATION OF WATER COLUMN TRIM AND CONTROLS: -

1. After assembly of the jacket install a 1/2" x 4-1/2" brass pipe nipple in the lower 1/2" water gauge tapping.
2. Install the low water cutoff on this nipple before connecting any piping to the return tapping.
3. Install a 1/2" x 4-1/2" brass nipple together with the tee connecting fitting from the low water cutoff in the upper 1/2" water gauge tapping.
4. Install the brass tube and connectors as illustrated in the instruction sheet provided with the low water cutoff.
5. Install the water gauge fittings and gauge glass.
6. Install the syphon fitting in the 1/4" pipe tapping on top of the low water cutoff and assemble the steam limit control to the syphon.
7. Install the safety valve in the 3/4" tapping on top of the boiler using the nipple and coupling provided also install the drain cock in the 3/4" tapping at the left side of the boiler.

NOTE - In case of Massachusetts boilers where 1" safety valve is required, it should be installed by means of a reducing bushing in the 3" tapping provided in the cover plate on the left side.

8. Mount the junction box on the jacket side panel with the sheet metal screws provided. Connect wiring to accord with applicable installation shown on the wiring diagram for steam boilers.

Refer to Figure 4 for steam boiler with Flush jacket.







Refer to Figure 5 for steam boiler with Deluxe jacket.

Figures 4 and 5 show a typical method of connecting the supply and return piping to the steam boiler. Return connections should be made through a Hartford loop. ALL SUPPLY AND RETURN PIPING SHOWN IS NOT SUPPLIED BY A.R. and S.S. CORP. THIS APPLIES ALSO TO THE DRIP LEG PIPING SHOWN BELOW THE GAS SHUTOFF VALVE.

Bottom pan (floor shield) is provided on all steam boilers. Refer to Page 11 in the Installation Manual for assembly view.



Fig. 6 - Wiring Diagrams

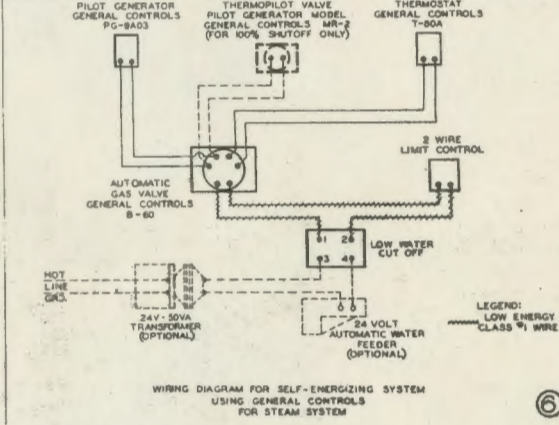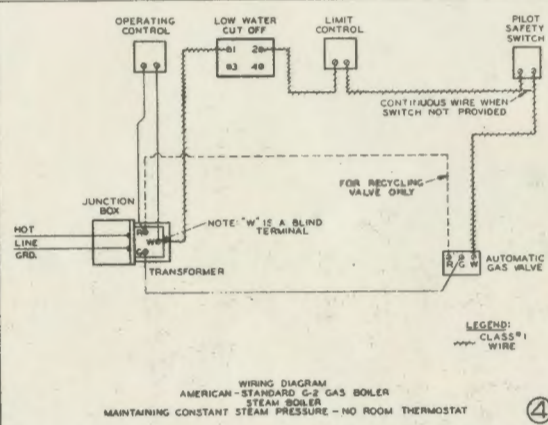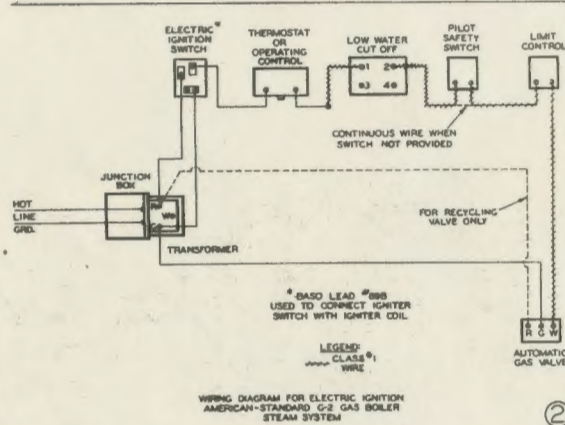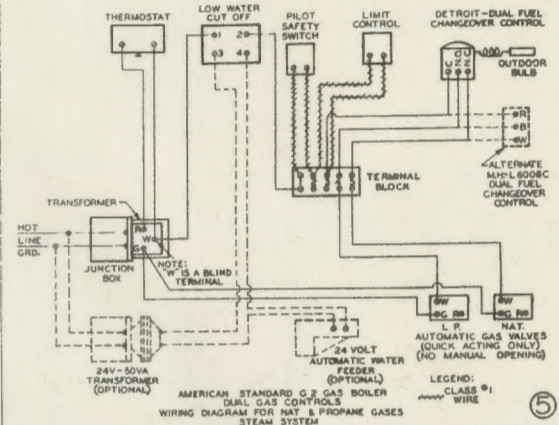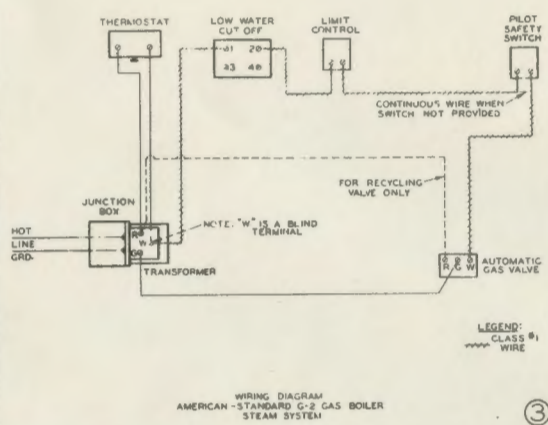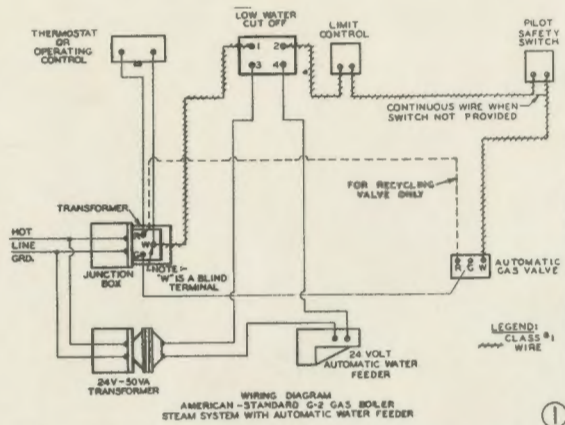

8G-13355-D

THESE WIRING DIAGRAMS FOR STEAM BOILERS ONLY

G-2 STEAM GAS BOILER

## FILLING SYSTEM

CAUTION: Never start boiler unless it is properly filled. Steam boilers should be filled until water is visible approximately half way up in the water gauge glass. After boiler is in operation make-up water should be added slowly.

## CHECK-UP OF LOW WATER CUTOFF


1. Light pilot in accordance with applicable instructions shown in the installation manual for water boilers. Turn thermostat to highest temperature. Automatic gas valve should open.
2. Open blow-off valve on bottom of cutoff and drain water until the water level in the boiler drops to approximately 1/4" visible in the gauge glass. Automatic gas valve should close.
3. Refill until water level is approximately half way up in the water gauge glass. Automatic gas valve should open.

## MAINTENANCE OF BOILER WHILE IN OPERATION

1. Check level regularly and add water slowly when needed.
2. This boiler is fired automatically.
3. Test safety valve at beginning of season and once a month, thereafter: -
  - a. Fasten cord or wire to valve lever.
  - b. When pressure is up, stand safe distance away and pull cord.  
(Steam should be released)

CLEANING BOILERS - The grease used to lubricate the cutting tools during erection of new piping systems serves as a carrier for dirt, with the result that a scum of fine particles and grease accumulates on the surface of the water in all new boilers, while heavier particles may settle to the bottom of the boiler and form sludge. These impurities tend to cause foaming, preventing the generation of steam and causing an unsteady water line.

This unavoidable accumulation of oil and grease should be removed by blowing-off the boiler as follows;

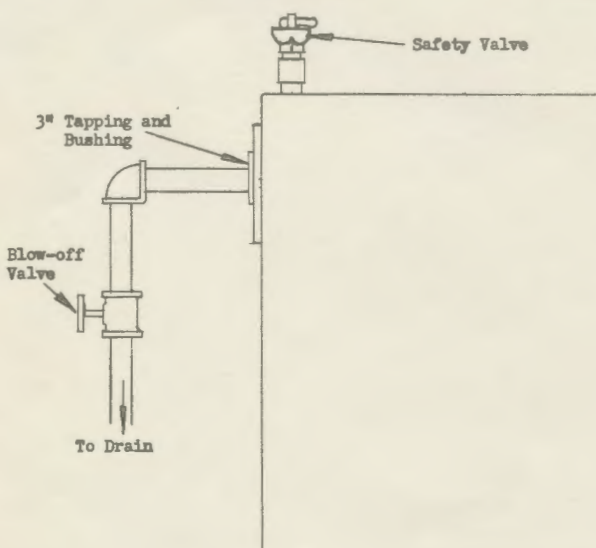


If not already provided, install a surface blow connection of at least 1-1/4" nominal pipe size with outlet extended to within 18 inches of the floor or to sewer, inserting a valve in line close to boiler. Bring the water line to center of outlet, raise steam pressure, and while fire is burning briskly open valve in blow-off line. When pressure recedes, close valve and repeat process adding water at intervals to maintain proper level. As a final operation bring the pressure in the boiler to about 10 lbs. close blow-off and manual shutoff valves, then open drain valve. After boiler has cooled, partly fill and flush out several times before filling it to proper water level for normal service. The use of soda or any alkali, vinegar or any acid is not recommended for cleaning heating boilers because of the difficulty of complete removal and the possibility of subsequent

injury after the cleaning process has been completed. Illustration shows piping arrangement for blowing-off steam boilers.

CAUTION - After blow-off operation, a checkup should be made of the low water cutoff as directed above.



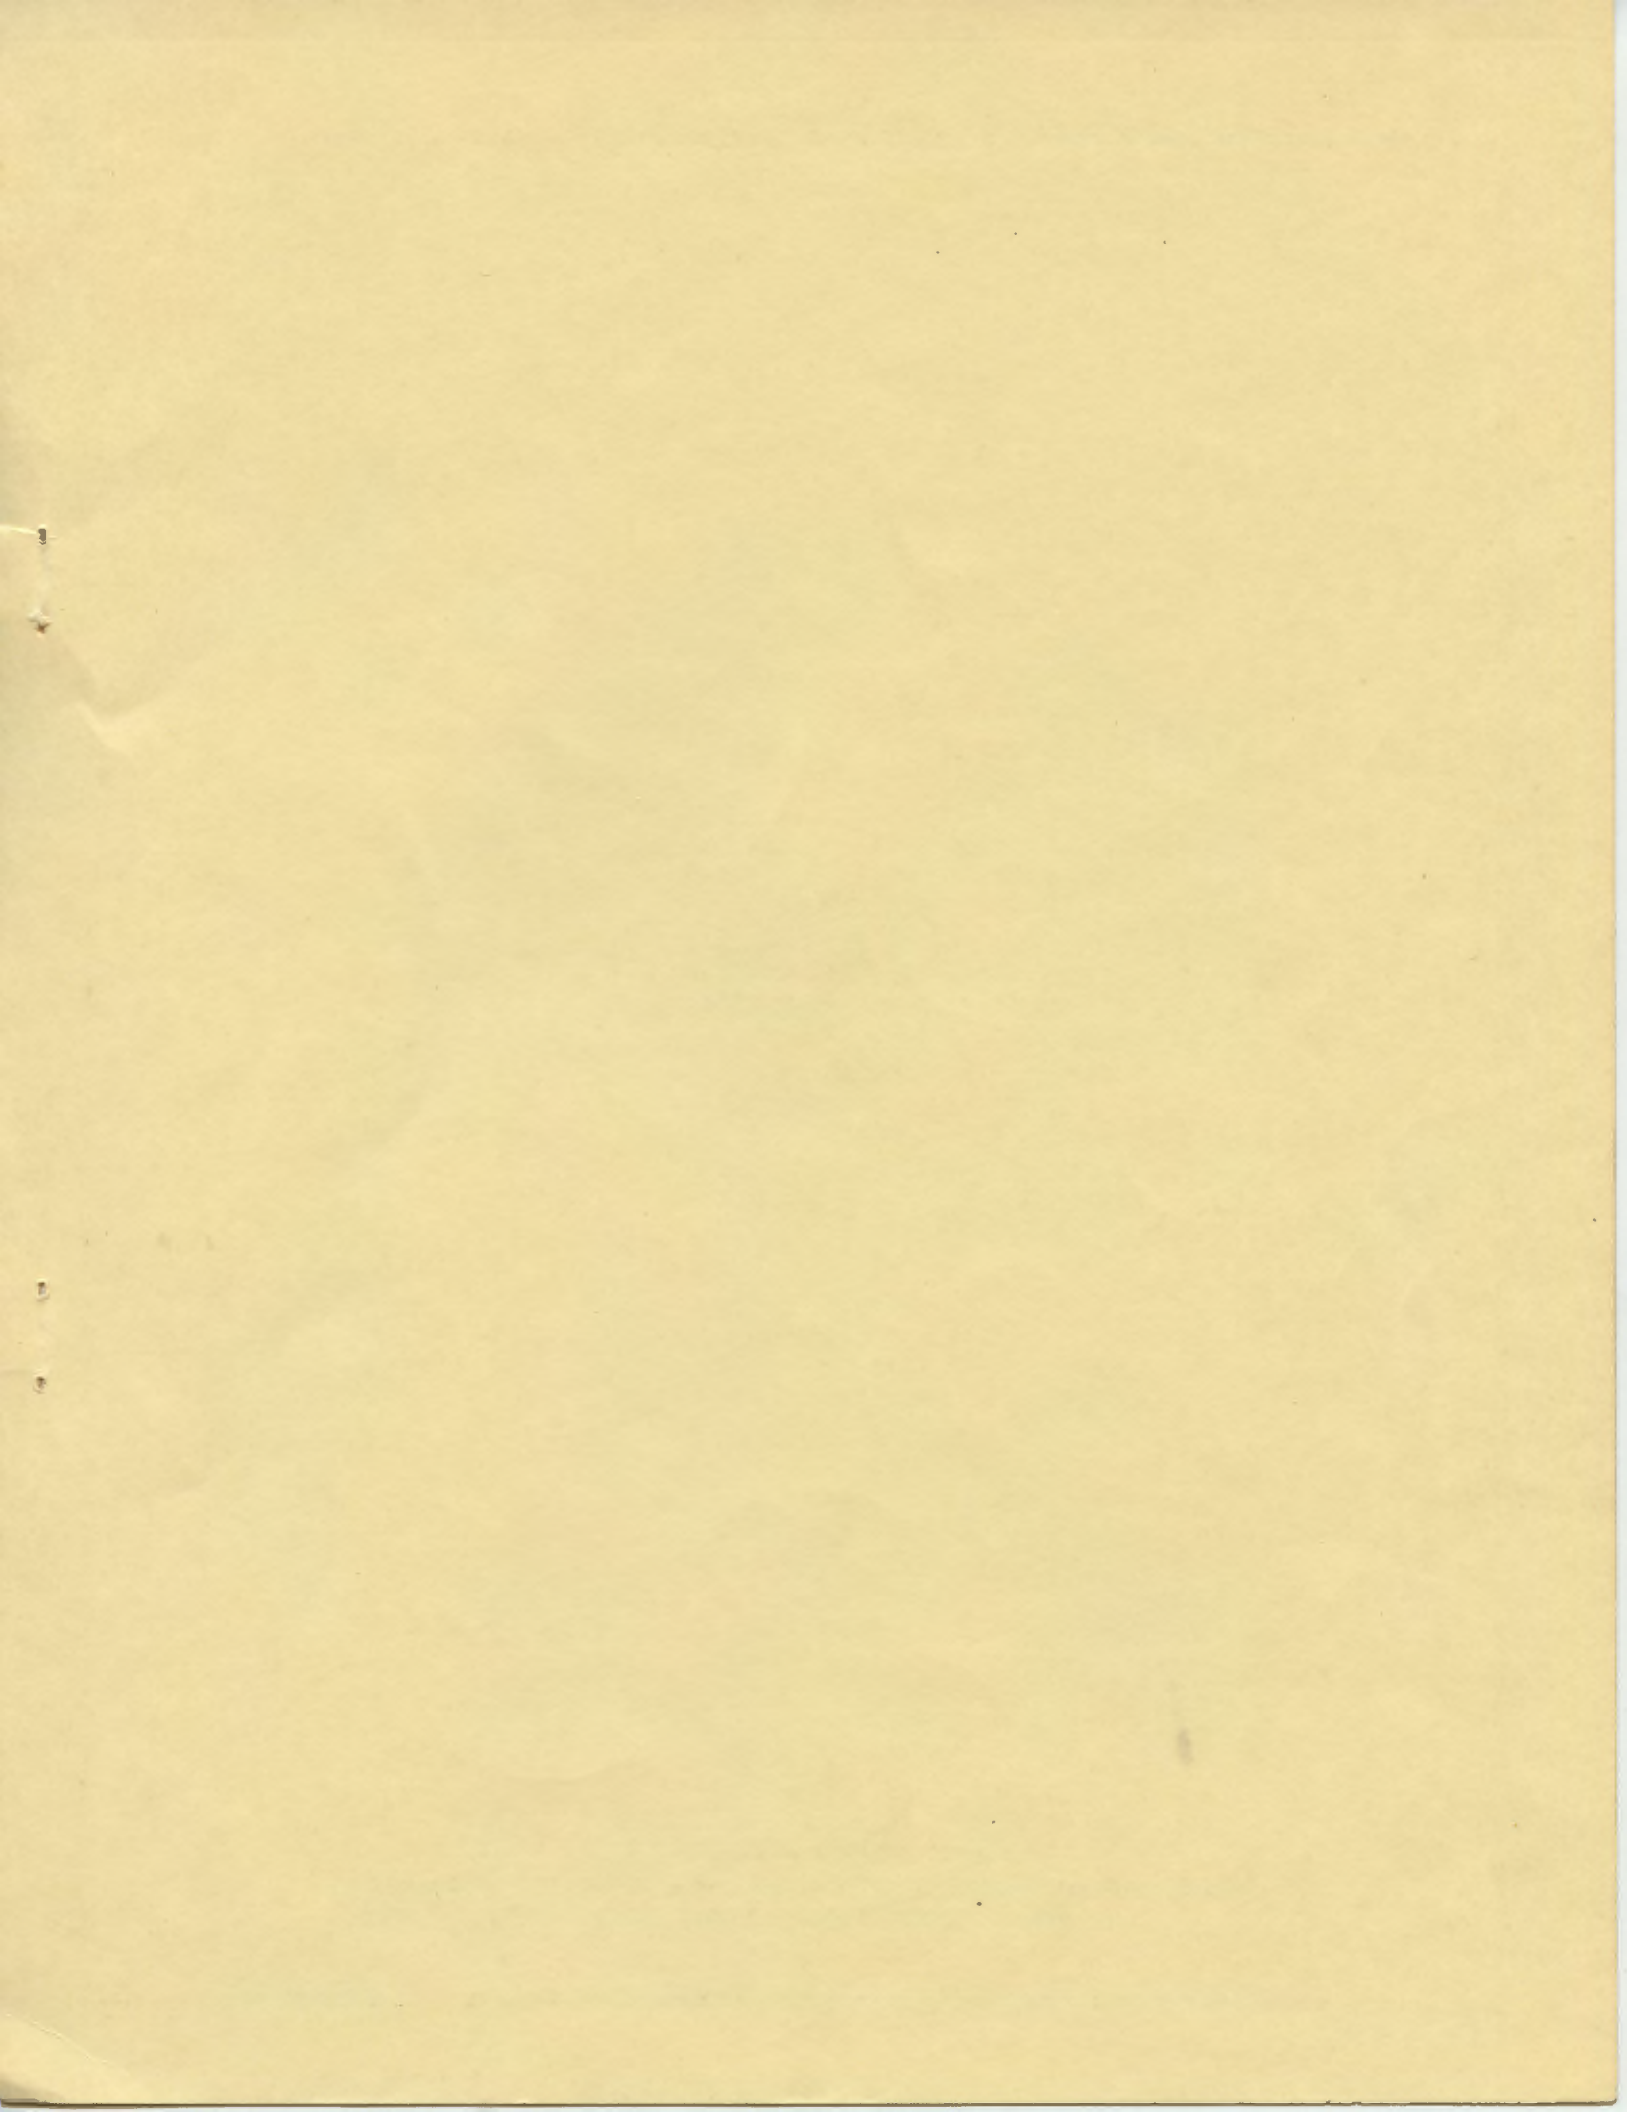



**Plumbing and Heating Division  
AMERICAN RADIATOR & STANDARD SANITARY CORPORATION  
40 WEST 40TH STREET, NEW YORK 18, N.Y.**